
OPERATING MANUAL & PARTS LIST

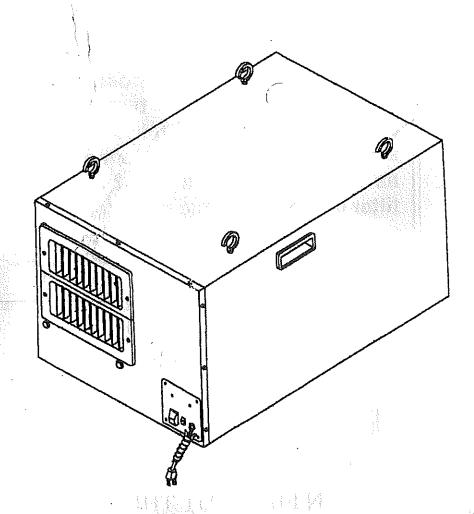

WARNING:

The user must thoroughly read and understand this manual before operating or servicing the dust collector. Care should be taken to follow all safety rules and warning instructions.





READ THIS MANUAL CAREFULLY BEFORE ASSEMBLY, TESTING & OPERATING



Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints.
- Crystalline silica from bricks, cement and other masonry products.
- Arsenic and chromium from chemically-treated lumber.

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: Work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

If you had purchased "remote control", please read the following notes.

TAKE OFF FILTER NET FIRST, THEN YOU CAN FIND OUT THE "REMOTE CONTROL" PLACED IN THE MIDDLE OF FILTER BAG.



WARNING!

Do not operate this unit until you read and are familiar with the entire operation manual.



WARNING!

Do not use this Air Filter System near flammable or combustible liquids, gases, gasoline, other fuels, lighter fluid, cleaners, oil based paints, natural gas, hydrogen, or explosive dust (like coal dust, magnesium dust, grain dust or gun powder).

ADDITIONAL SAFETY RULES FOR DUST COLLECTOR

IMPORTANT SAFETY INSTRUCTIONS

When using your Air Filter System,
Observe the following basic safety precautions.

WARNING: To reduce the risk of fire,
electric shock or injury:

- Read and understand this owner's manual and all labels on the Air Filter System before operating. Use only as described in this manual.
 - To avoid personal injury or damage to the Air Filter System, use only recommended accessories.

Sparks inside the electrical parts can ignite flammable vapors or dust. To avoid fire or explosion:

- Do not use this Air Filter System near flammable or combustible liquids, gases, gasoline, other fuels, lighter fluid, cleaners, oil-based paint natural gas, hydrogen or explosive dust (like coal dust, magnesium dust, grain dust, or gunpowder.
- Do not filter anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- To avoid health hazards from vapors or dusts, do not vacuum toxic materials.
- Do not use or store near hazardous material.
- Do not use outdoors or on wet surfaces.
- Put unit on a stable, level surface.
- Do not allow use as a toy. Strict attentions is necessary when used by or near children.
- Do not leave appliance plugged in. Unplug from the outlet when not in used and before servicing.
- To avoid injury from an accidental start of the filter, unplug power cord before changing or cleaning filter/dust.

- Do not use without filter/dust bag and or chip bag in place.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Turn off controls before unplugging.
- Do not use with a damaged cord, plug or other parts, if your Air Filter System is not working as it should, has missing parts, has been dropped or damaged, left outdoor, or dropped into water, return it to a Service Center.
- Do not pull or carry by the cord. Do not use should the cord be pulled as a handle or close a door on the cord, nor around sharp edges or corners. Do not run Air Filter System over the cord, keep away from heated surfaces.
- Do not handle plug of the Air Filter System with wet hands.
- Do not put any object into ventilation openings.
- Do not use with any ventilation openings blocked. Keep free of dust, lint, hair or anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Extension cords of the wrong size or in poor condition can pose fire and shock hazards. When using an extension cord, be sure it is in good condition. See "Extension Cord" in the "Operating" section for proper wire size.
- Connect to a properly grounded outlet only.
 See "Grounding instruction" on page 11.

SAVE THESE INSTRUCTIONS

SAFETY RULES FOR WORKING EQUIPMENT

- **1. READ AND BECOME** Familiar with the entire operating manual.
- KEEP GUARDS AND COVER in place and working order.
- 3. ALWAYS USE SAFETY GLASSES. Also use a face or dust mask if cutting operation is dusty. Everyday eye glasses only have impact resistant lenses, they are not safety glasses.
- KEEP WORK AREA CLEAN. Cluttered areas and benches invite accidents.
- DO NOT attempt to exceed the normal limits and speeds of your tools.
- 6. AVOID ACCIDENTAL STARTING. Make sure switch is in "OFF" position before plugging in cord.
- 7. DISCONNECT TOOLS BEFORE SERVICING and when changing accessories such as blades, cutters.
- 8. DON'T OVER REACH. Keep your proper footing and balance at all times. For best footing wear rubber soled footwear. Keep floor clear of oil, scrap wood, etc.
- 9. WEAR PROPER APPAREL. Loose clothing or jewelry may get caught in moving parts. Wear protective hair covering to contain long hair.
- 10. MAKE WORKSHOP CHILD PROOF. Place a padlock on the switch when blade saw is not in use and store the key in a safe location.
- 11. REMOVE ADJUSTING KEYS AND WRENCHES. Form the habit of checking to see that keys and adjusting wrenches are removed from tool before turning it on.

- 12. AVOID DANGEROUS ENVIRONMENT.

 Don't use power tools in damp or wet locations. DO NOT USE in a potentially explosive environment.
- be kept a safe distance from work area, especially while operating unit.
- 14. USE THE PROPER TOOL. Don't force tool or attachment to do a job for which it was not designed.
- 15. MAINTAIN TOOLS IN TOP CONDITION.

 Keep tools sharp and clean for the best and safest performance. Follow instructions for lubricating and changing accessories.
- 16. SECURE YOUR WORK. Use clamps or a vise to hold work, when practical. It's safer than using your hand and prevents round or irregularly shaped pieces from turning.
- 17. CHECK DAMAGED PARTS. Before further use of the tool, a guard or other part that is damaged should be checked to assure that it will operate properly and perform its intended function check alignment of moving parts, breakage of parts, mounting or any other conditions that may affect its operations. A guard or other part that is damaged should be properly repaired or replaced.
- 18. USE RECOMMENDED ACCESSORIES

 Consult Owner's Manual could be hazardous.
- 19. NEVER STAND ON TOOL. Injury could occur from a fall.
- 20. NEVER LEAVE TOOL RUNNING AND UNATTENDED.
- 21. ALWAYS REMOVE CORD PLUG from electrical outlet when adjusting of changing working parts of a tools.

SPECIFICATIONS

Motor	1/3 HP, 700 RPM,	, Single phase, 60Hz, 3	3A
Fan		9"x	7"
Noise(dB)			38
Capacity (CFN	1, feet3/min)	14(00
Filter Cycle (ti	me/hour, 20"x20"x8"	room)2	26
Outer Filter (n	nicron)		-5
Inner Filter (m	icron)		-1
Overall Dimen	762x505x420m	m	
N. W			32
G. W			34
Packing (cm)-	***************************************	81x53x4	17
CU'FT		7	.1


GROUNDING

- In the event of a malfunction or breakdown, grounding provides a path of least resistance for the electric current, to reduce the risk of electric shock. This machine is equipped with an electrical cord that has an equipment grounding conductor and a grounding plug. The plug must be plugged into a matching outlet that is properly installed and grounded in accordance with all local codes and ordinances.
- 2. Do not modify the plug provided. If it will not fit the outlet, have the proper outlet installed by a qualified electrician.
- 3. Improper connection of the equipment grounding conductor can result in the risk of electric shock. The conductor with the green outer insulation (with or without a yellow stripe), is the equipment grounding conductor. If repair or replacement of the electrical cord is necessary, do not connect the equipment grounding conductor to a live terminal.
- 4. Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if there is doubt as to whether the machine in properly grounded.
- 5. Using only three-wire extension cords that have three-prong grounding plugs and three pole receptacles that accept the tool's plug.
- 6. Repair or replace damaged or worn cord immediately.
- 7. This machine is intended for use on a circuit that has an outlet that looks like the one in illustration (A). The machine has a grounding plug that looks like the plug in illustration (A). A temporary adapter, which looks like the adapter in illustration (B) and (C), may be used to connect the plug to a one pole receptacle, as shown in illustration (B), if a properly grounded outlet is not available. The temporary adaptor should only be used until a properly grounded outlet can be installed by a qualified electrician. The three coloured rigid ear plug extending from the adapter, must be connected to a permanent ground such as a properly grounded outlet box.

NOTE: The type of electrical plug and receptacle differs from country to country.

CAUTION: In Canada, only the grounding shown in figure (A) is acceptable. The extension cord should be a CSA certified S.J.T. type or something better.


CAUTION: In Australia, only the grounding shown in figure (D) is acceptable. The extension cord should be SSA certified.

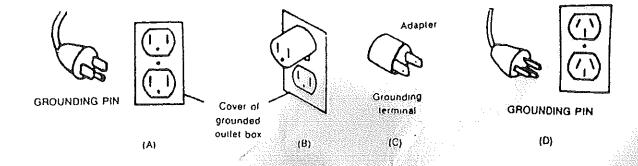

TROUBLE SHOOTING

TROUBLE	PROBABLE CAUSE	CORRECTION	
Motor does not run when power switch is pressed	1. Switch is burnt out.	1. Replace the switch.	
"ON"	2. Connection wire is loose or damaged.	2. Tighten wire or replace wire.	
Motor does not run full speed.	1. Power voltage is too low.	1. Test voltage.	
	2. Motor is damaged.	2. Check and repair motor,	
Motor does not run full power.	1. Incorrect power wiring.	Replace with the correct size power wiring.	
* i.,.	2. Overloaded	2. Reduce load.	
Motor overheats	Motor voltage is different	Check the voltage label	
	2. Motor is damaged	2. Check and repair motor	
Insufficient suction power	1. Inlet port blocked.	1. Clean inlet port.	
	2. Air filter bag is full.	2. Empty dust from filter bag.	
2	3. Outlet port blocked.	3.Clean outlet port or adjust the direction of outlet.	
Air filter is shaking.	The machinery is not fixed.	1. Mounting it firmly. 2. Place the machine on a level surface. 3.Put away power wire in order.	
	The system is not balanced at the same level.		
	3. Power wire is stumbled.		

EXPLODED DIAGRAM OF AIR FILTER PARTS

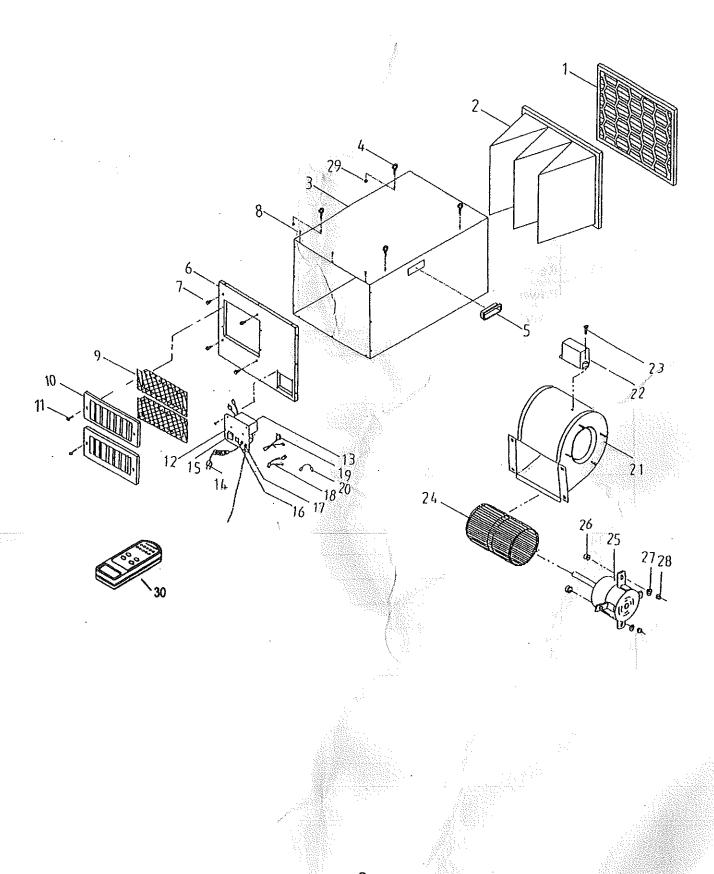

PARTS LIST

NO	DESCRIPTION	SPECIFICATION	QTY
1	Filter Net		1
2	Filter Bag		1
3	Main Engine Box		1
4	Hanger	1/4" x 1/2"	4
5	Handle	4"	2
6	Outlet Cover		1
7	Hex. Bolt	5/16" x 1/2"	4
8	Round Head Screw	M4 x 9	12
9	Safety Net		2
10	Outlet Port		2
11	Round Head Screw	3/16" x 1/2"	4
12	Switch Lamella		1
13	Receiver for remote control		1
14	Power Cord		1
15	Switch		1
16	Temperature control switch		1
17	Chain Switch		1
18	Connector		1
19	Connector		1
20	Connector		1
21	Air Box		1
22	Condenser Cover		1
23	Round Head Screw	3/16" x 3/4"	2
24	Fan Blade	9" x 7"	1
25	Motor		1
26	Rubber		4
27	Washer	1/4" x 18	4
28	Nut	1/4"	4
29	Nut	1/4"	4
30	Remote control	Optional	1